

## Installation, maintenance and warranty: LVT design flooring SENSE

### Installation:

Required tools:

- stanley knife
- rubber hammer (white)
- pencil, ruler, square or whisk hook, hitting block
- spacers

Before installation:

Leave the floor tiles lying flat on the floor to acclimatise for at least 48 hours in the room where the floor is to be installed. Check the tiles for defects and damage before starting the installation. Subsequent claims in this regard are not possible, or for defects that could have been noticed beforehand.







Installation:






The floor must be smooth, stable, dry and clean. To achieve the best results, it is recommended to always level the ground on which the tiles are to be installed. This is especially advised if there are height differences of more than 2 mm per running metre. Installing on existing ceramic tiles or parquet flooring is not permitted without levelling. In addition, height differences like stairs are not allowed, because they will be noticed and seen afterwards. The atmospheric humidity in the room should be between 40% and 70% and the room temperature between 15 and 25 degrees C. Subfloor temperature > 15°C.

Installation on a floor heating or cooling system is allowed, as long as the installation adheres to the requirements of the supplier of this system. The floor heating temperature should be brought to 15 degrees C before installing the floor. After finishing the installation of the floor, the temperature of the system can be increased by 2 degrees per day until a maximum floor surface temperature of 26 degrees C is reached.

LVT Dry-Back: Get advice from your dealer regarding the correct and suitable glue and requirements. Tiles need to be installed always in the same direction, indicated by an arrow on the back of each tile. Otherwise gloss differences are possible.

It is recommended to install LVT Click always on a suitable underlay. Get advice from your dealer regarding the correct and suitable underlay. The underlay should be stable and of high density. We recommend i.e. Xtreme oder ProsoundPlus.

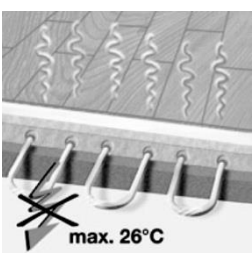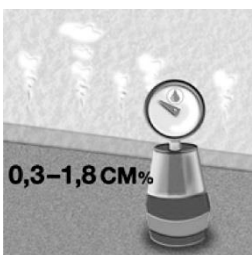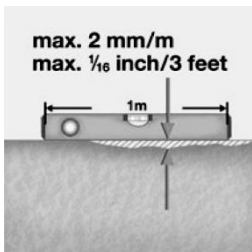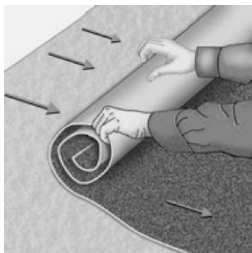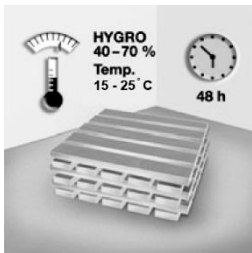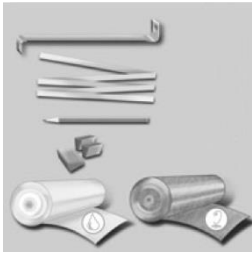

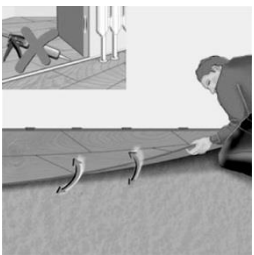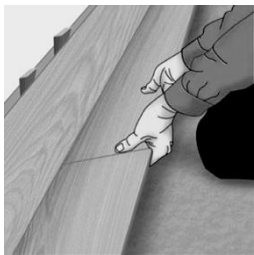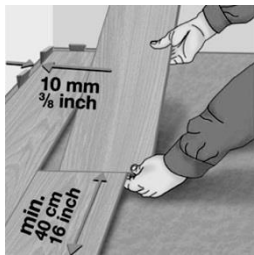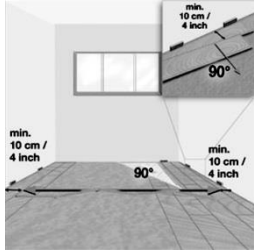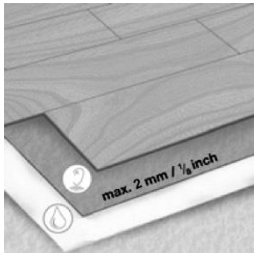

**Start of installation:**

Measure the width of the room in order to determine the width of the first row, so as to ensure that the floor is centred and symmetrical. Check with a piece of LVT click and underlay that the doors can still be opened. If this is not the case, shorten the doors so that a gap of 3 - 5 mm is left.

Start installing the LVT click by putting the tongue of the panel against the wall. Finish the first row and make sure that the tiles are very well connected.

Make sure that an expansion gap around the floor, to the wall, doors, etc., of 7-10 mm is left. If the length or width of the floor is more than 10 metres, a dilation profile is needed (not for dry-back).

Cut the tiles with a stanley knife with 2 cuts along the whisk hook, and afterwards break the tile. The left piece can be used on the next row as a starter. The left pieces should be more than 30 cm long. The top connections between the tiles should be more than 20 cm away from each other. Click the tiles under an edge of about 30 degrees to each other. Start first with the top side, then the long side.

Each time a tile is installed, the tiles must be fixed with the hitting block. In this case, small joints between the tiles are prevented, and the tiles cannot become disconnected after using the floor. Claims for this type of damage cannot be approved afterwards.

Finish installing all the tiles and also keep an expansion gap of 7-10 mm in the last row. The width of the last row should be at least 5 cm.

After the installation is finished, the floor should be properly cleaned. After that, the skirtings or mouldings can be attached. Please protect furniture to prevent scratches in the floor.

**Maintenance:**

LVT tiles are finished products and do not require much maintenance. For normal maintenance, use the LVT cleaner with warm water, a broom or a vacuum cleaner. Please take care because the floor will be wet and slippery after cleaning.

**Warranty:**

The warranty period is mentioned on the packaging. Structure and colour differences are inherent to the product and constitute no reason for a claim. LVT tiles are soft, and therefore point pressures can be seen. The warranty is limited to production faults and defects. Defects and faults due to use or installation are not included in the warranty. If the installation and maintenance instructions are not followed, the warranty is invalidated. Visible cracks, production faults and damage must be reported the dealer immediately, latest within 8 days. Claims will not be approved afterwards.